



HLDX HYDRAULIC LIFTER

6 STEP PROCESS



Step One:

Put the lifter on the right size support and calibrate adjustment.



Step Two:

Close the protective cover, and press the handle until the lifter comes apart.



Step Three:

Line up the guide support like shown in the picture.




Step Four:

Remove the lifter and place it on the oil collection tray.



Step Five:

Once clean, put the lifter back inside with the tools already previously set.

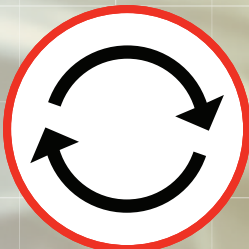

Step Six:

For remainder lifters on the same head, repeat from Step Three on.



The HLDX is designed to help easily compress the lifter to be able to take them apart for cleaning and inspection.

Provides new opportunities for your business to be more productive.

